



WILLOW CREEK GUITARS

www.willowcreekguitars.com

2023-01-28

FXB USER INSTRUCTIONS

The FXB integrated effects processor allows Willow Creek to offer internal effects at a lower price. You have complete and independent control of delay, chorus and reverb that play in the guitar without an amp. These effects also pass through to an amplifier. There is a condenser mic with a level control that operates when plugged into an amplifier or PA system to mix with the piezo to warm up the tone. The battery is a rechargeable lithium ion and a charging system is included. To charge the battery plug a USB cable into the output assembly.

"VOLUME"

To turn the system on, press the "Volume" knob. The green LED will light. To turn it off press and hold the "Volume" knob for about three seconds. This knob controls the volume of the digital effects.

"REVERB"

This control is used to set the variable reverb effects. Turning the knob clockwise increases the size of the reverb. Far left is off.

"CHORUS - DELAY"

This knob controls the amount of chorus and delay. The left portion of the knob controls the chorus, the right portion of the knob controls the delay.

"MIC"

This knob controls the volume of the internal condenser microphone. This is only active when the system is plugged into an amp or PA system. Adding some microphone will mix the piezo and microphone to warm up the tone of the guitar.

